

Quick Installation Guide

4G Router CP-XR-DE4C-S

Packaging Content

Please check for the following items in the packing box:

- 4G Router × 1
- Power Adapter × 1
- USB to Type C cable x 1
- Quick Installation Guide × 1
- Ethernet cable x 1

For product or function details, please go through the user guide.

Table of Contents




1.	Appearance	4
1.1.	LED Lights Indicators	4
1.2.	Interfaces Description.....	5
1.3.	Working Environments.....	6
2.	Installation Steps.....	6
2.1.	Router Installation Steps.....	6
2.1.1.	Power On.....	6
2.2.	Router Configuration.....	7
2.2.1.	Login	7
3.	DHCP Setting.....	9
4.	Wi-Fi Setting	10
4.1.	Wi-Fi 6 Setting	11
5.	4G network Setting	12


1. Appearance



The picture is only for reference.

1.1. LED Lights Indicators

Indicator	Meaning	Status	Description
	4G indicator	Always on	After inserting the SIM card, router gets the network and connected
		off	SIM card not inserted, or the network is not found after inserting the SIM card.
	Wi-Fi	Always on	Wi-Fi function is normally enabled, no data connection.
		Flashing	Wi-Fi function is normally enabled, there is data connection.
	Networking indicator	Always on	There is network, no data transmission.
		Flashing	There is network and data transmission.
		Off	No network

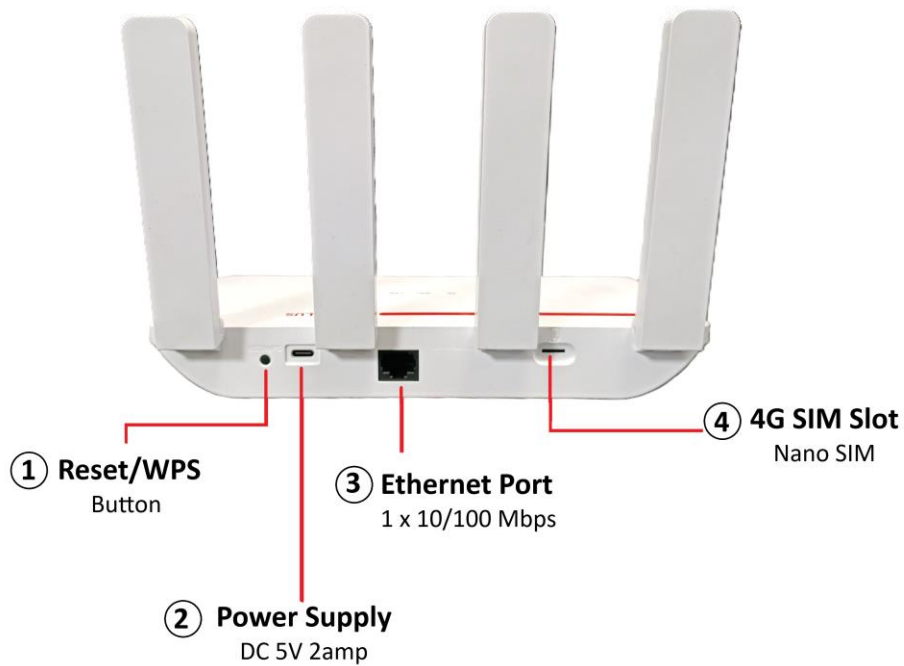

The picture is only for reference.

1.2. Interfaces Description

S. No.	Interface	Function
1	RESET / WPS	Press and hold for more than 15 seconds, the router will restore factory settings, Press, and hold for 3-5 seconds in the power-on state, the router will enable WPS wireless connection status.
2	Power supply DC-5V	DC power input interface, Connect to 5V/2A power adapter
3	Ethernet Port	Rj45 network port, can be used as a LAN port
4	4G SIM Slot	SIM card slot, only supports NANO SIM card

1.3. Working Environments

To ensure proper functioning of the router, the operating environment is recommended as follows:

- a) Keep away from heat, maintain ventilation.
- b) Lay equipment on flat surface.
- c) Lay equipment in dry environment without dust.
- d) Dismantle power supply and all wirings in thunderstorm weather in case of lightning stroke.

Note: please supply rated power for equipment. If unmatched power is supplied, the router may get damaged.

2. Installation Steps

2.1. Router Installation Steps

This router has a built-in 4G modem. Before using the 4G router, you need to purchase a 4G SIM card from a local operator.

Insert the 4G SIM card into the SIM card slot of the device.

Note - Please pay attention to the insertion instructions near the SIM card slot. This router only supports NANO SIM cards. If you need to replace the SIM card, please turn off the device power first to prevent damage to the SIM card.

2.1.1. Power On

Please use the original factory standard power adapter to power the 4G router, plug in the power supply, and wait a while, because the device will take some time to start up.

After startup, the Wi-Fi and 4G (If the SIM card is connected) indicator lights are always on. After successfully registering to the 4G network, the 4G indicator will always be on. Now you can use computers, mobile phones, and other terminals to connect to this machine through Wi-Fi (refer to the body label for the Wi-Fi SSID) or network cable and use 4G data to surf the Internet.


2.2. Router Configuration

If you need to manage and configure this router, you can connect to the 4G router wirelessly or wired. For the default gateway address, please refer to the label on the router.

These network parameters can be modified according to the actual situation, and the default values will be explained in the text.

2.2.1. Login

1. Open the browser of your computer or smartphone/tablet, enter the IP address on the router body sticker in the address bar, and then press Enter to enter the background login interface.
2. In the login window that pops up, enter the Username: admin, Password: admin; then click "Sign in"

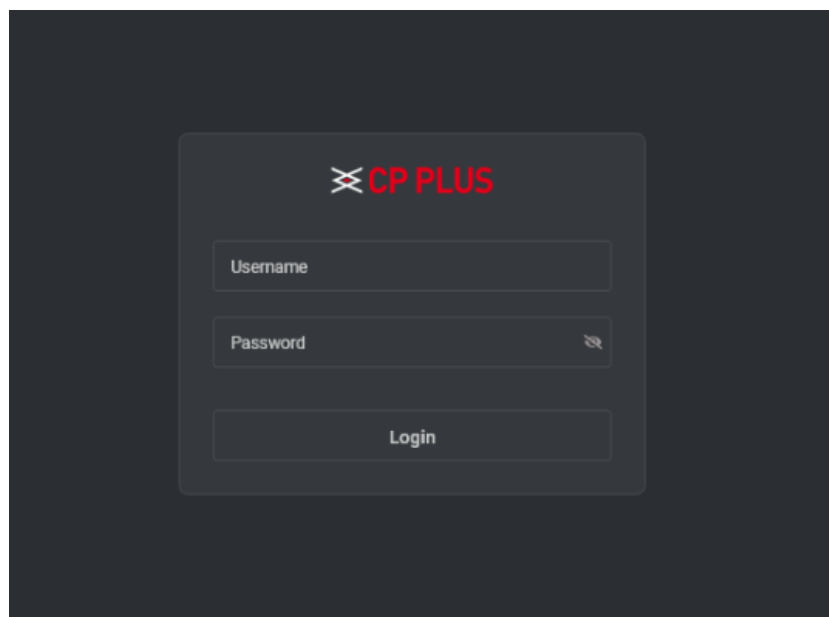


3. After entering the correct password, you can enter the router WEB configuration interface.



Prompt: password of initial administrator is admin; user can change administrator's password after entering configuration page.


3. DHCP Setting

Click on “Home Network” icon on the homepage, go to the “DHCP Settings” option, then give the IP range and click on Save.

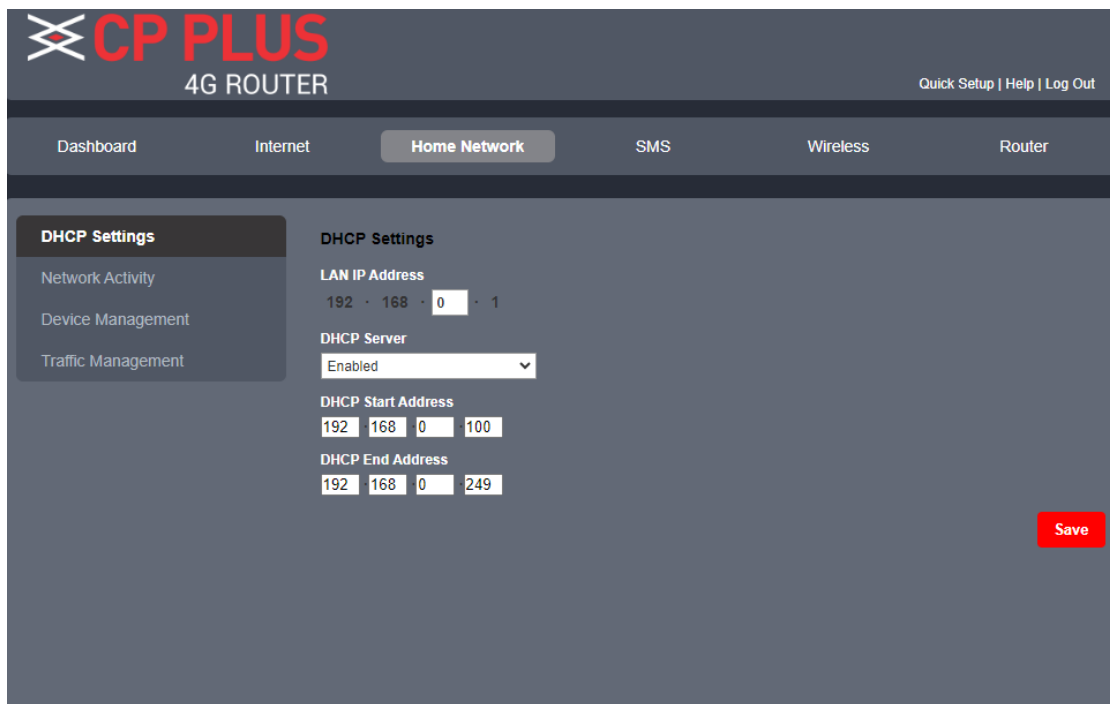

4. Wi-Fi Setting

Click “Wireless” icon on the homepage, there will be interface of Wi-Fi settings as below, here we can change SSID name and Wi-Fi password.

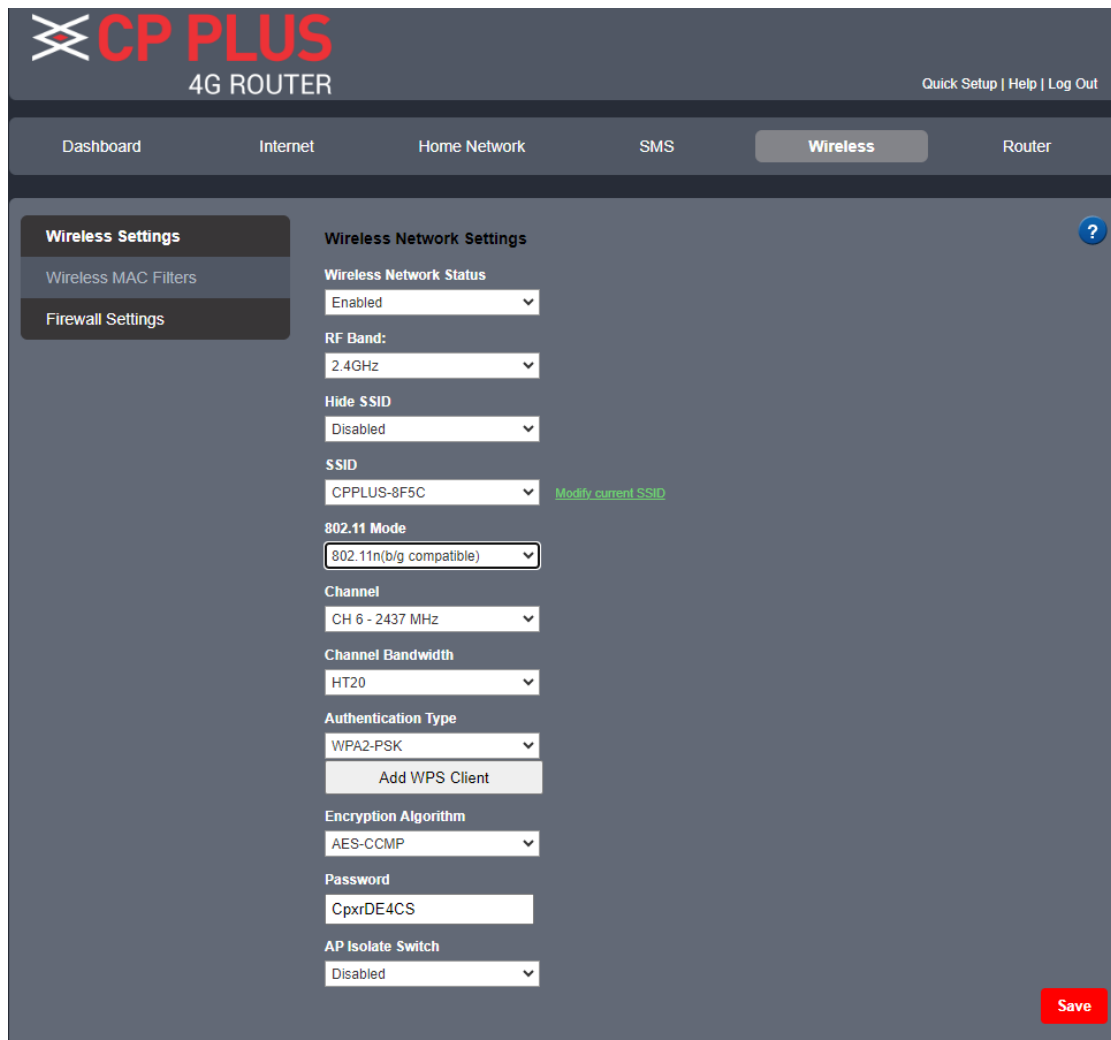

The screenshot displays the CP PLUS 4G Router's web interface, specifically the Wireless Network Settings page. The page is organized into a sidebar on the left and a main content area on the right. The sidebar contains links for 'Wireless Settings', 'Wireless MAC Filters', and 'Firewall Settings'. The main content area is titled 'Wireless Network Settings' and includes a 'Wireless Network Status' section with a dropdown menu set to 'Enabled'. Below this are several other settings, each with a dropdown menu: 'RF Band' (2.4GHz), 'Hide SSID' (Disabled), 'SSID' (CPPLUS-8F5C), '802.11 Mode' (802.11n(b/g compatible)), 'Channel' (CH 6 - 2437 MHz), 'Channel Bandwidth' (HT20), 'Authentication Type' (WPA2-PSK), 'Encryption Algorithm' (AES-CCMP), and 'AP Isolate Switch' (Disabled). A 'Password' field contains the text 'CpxrDE4CS'. A 'Modify current SSID' link is visible next to the SSID dropdown. At the bottom right, there is a red 'Save' button.

CP PLUS
4G ROUTER

Quick Setup | Help | Log Out

Dashboard Internet Home Network SMS **Wireless** Router

Wireless Settings

Wireless MAC Filters

Firewall Settings

Wireless Network Settings

Wireless Network Status
Enabled

RF Band:
2.4GHz

Hide SSID
Disabled

SSID
CPPLUS-8F5C [Modify current SSID](#)

802.11 Mode
802.11n(b/g compatible)

Channel
CH 6 - 2437 MHz

Channel Bandwidth
HT20

Authentication Type
WPA2-PSK

Add WPS Client

Encryption Algorithm
AES-CCMP

Password
CpxrDE4CS

AP Isolate Switch
Disabled

Save

4.1. Wi-Fi 6 Setting

Click “Wireless” icon on the homepage, then go to the “Wireless Settings” option, click on “802.11 Mode” and select 802.11ax and save.

The screenshot shows the CP PLUS 4G Router's wireless settings interface. The 'Wireless' tab is selected in the top navigation bar. On the left, the 'Wireless Settings' menu is expanded. The main content area, titled 'Wireless Network Settings', contains the following configuration options:


- Wireless Network Status:** Enabled
- RF Band:** 2.4GHz
- Hide SSID:** Disabled
- SSID:** CPPLUS-8F5C (with a 'Modify current SSID' link)
- 802.11 Mode:** 802.11 ax (selected from a dropdown menu that also includes 802.11n(b/g compatible), 802.11 b/g, 802.11 b only, and 802.11 g only)
- WPA2-PSK:** (with an 'Add WPS Client' button)
- Encryption Algorithm:** AES-CCMP
- Password:** CpxrDE4CS
- AP Isolate Switch:** Disabled

A red 'Save' button is located at the bottom right of the settings panel.

5. 4G Network Setting

This router supports the function of automatically configuring 4G dial-up parameters. Automatic configuration of network dial-up parameters for most operators in the world. Special APN customization requirements, please set the following steps:

- ✓ Step 1: Confirm the SIM card can work.
- ✓ Step 2: Confirm that the 4G dial setting normally router meets the local operator's setup requirements. The step as below
- Please click on the "Internet" on the homepage and enter the Internet connection settings. click "Set", and enter the username, password, dialing number, APN parameter provided by 4G ISP, click Save.

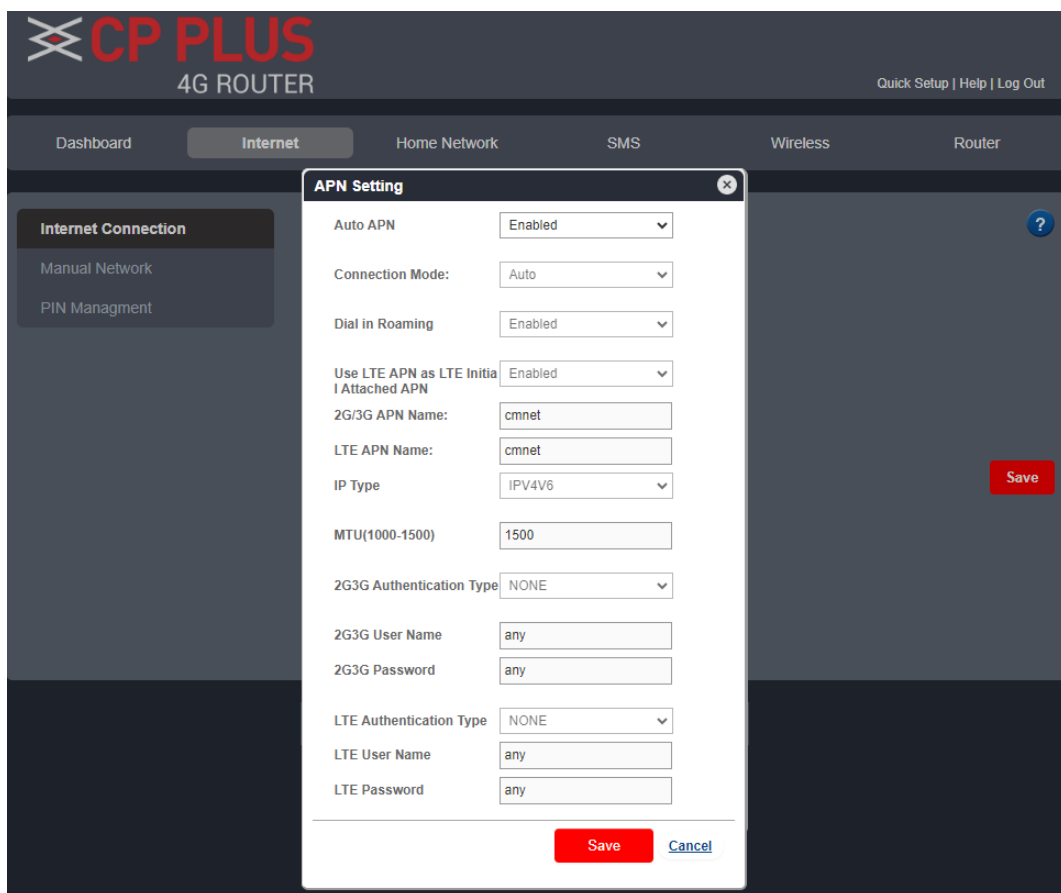


The screenshot displays the CP PLUS 4G Router web interface. The main navigation bar includes "Dashboard", "Internet", "Home Network", "SMS", "Wireless", and "Router". The "Internet" tab is selected. On the left, the "Internet Connection" menu is open, showing "Manual Network" and "PIN Management". The "APN Setting" dialog box is centered, containing the following fields:

Field	Value
Auto APN	Enabled
Connection Mode	Auto
Dial in Roaming	Enabled
Use LTE APN as LTE Initial Attached APN	Enabled
2G/3G APN Name	cmnet
LTE APN Name	cmnet
IP Type	IPv4V6
MTU(1000-1500)	1500
2G3G Authentication Type	NONE
2G3G User Name	any
2G3G Password	any
LTE Authentication Type	NONE
LTE User Name	any
LTE Password	any

At the bottom of the dialog box, there are "Save" and "Cancel" buttons. A red "Save" button is also visible on the right side of the main interface.

- Network searching method!

When you select "manual Network" in the network searching mode, the network list will pop up, including all the networks searched. The user selects an available network from the list, and the device will register to the network selected by the user.

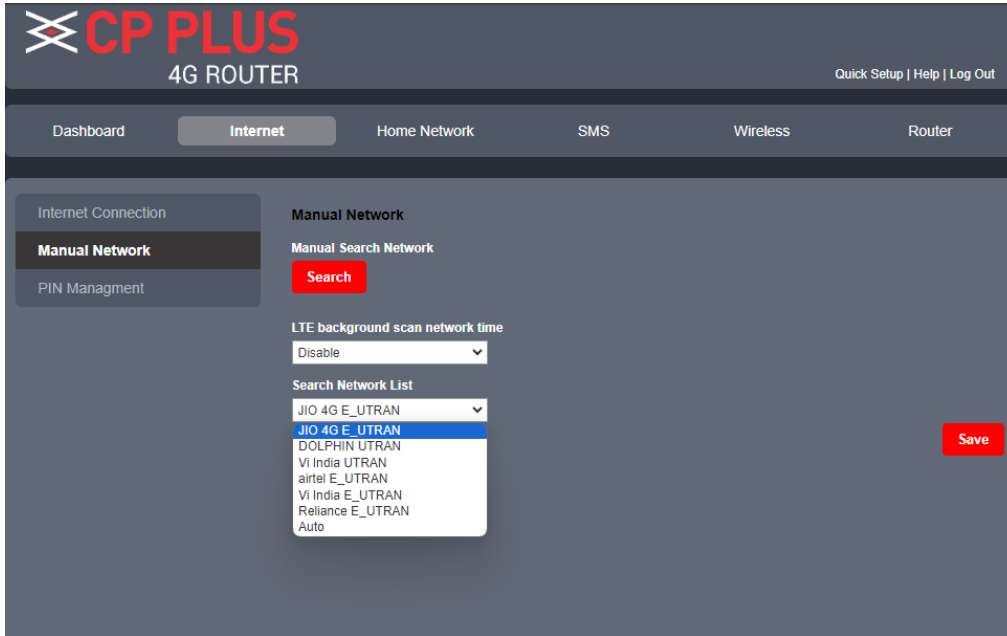

Thanks for Choosing CP Plus!



Website: - www.cplusplusworld.com

Email id: - sales@cpplusplusworld.com
